


EDH12TRBD2
EDH14TRBD2
EDH12TRBW2
EDH14TRBW2

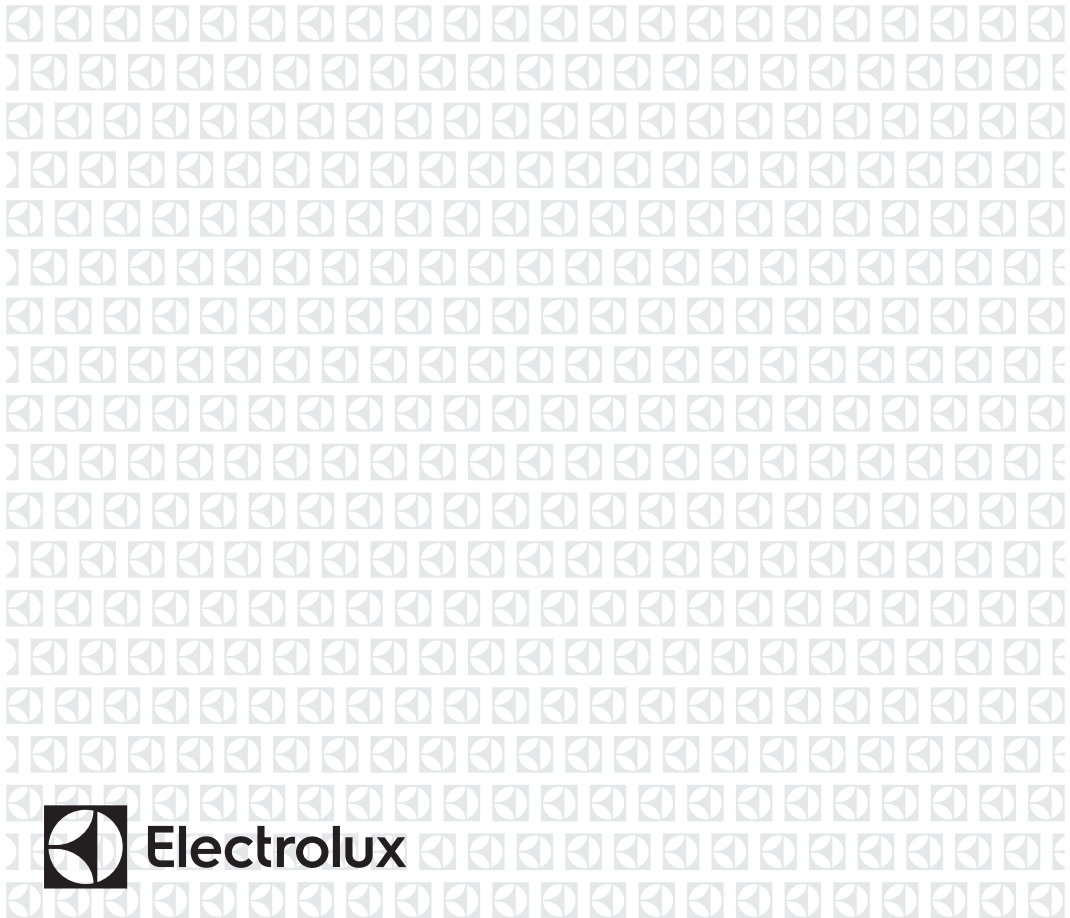

CONTENTS

1. SAFETY INFORMATION.....	3
2. SAFETY INSTRUCTIONS	4
3. PRODUCT DESCRIPTION	5
4. BEFORE FIRST USE	7
5. OPERATING INSTRUCTIONS	8
6. CARE, CLEANING AND STORAGE.....	15
7. WHAT TO DO IF... ..	17
8. ENVIRONMENT CONCERNS.....	19

WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

Visit our website to:



Get usage advice, brochures, trouble shooter, service information:
www.electrolux.com



Register your product for better service:
www.registerelectrolux.com



Buy Accessories, Consumables and Original spare parts for your appliance:
www.electrolux.com/shop

CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number, the information can be found on the rating plate.

Symbols in the instruction:

 Warning / Caution-Safety information.

 General information and tips.

 Environmental information.

Subject to change without notice.

1. SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

- This appliance is intended to be used in household (indoors) and similar applications.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children and dispose of it properly.
- Cleaning and user maintenance shall not be made by children without supervision.
- Unplug the appliance before moving or carrying out any maintenance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The appliance shall be installed in accordance with local wiring regulations.
- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not use or store the appliance in a room with operating ignition sources, such as open flames, operating gas appliances or electric heaters.

- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the appliance to avoid damaging the surface or water leakage.
- Use only accessories, parts or tools recommended for this appliance.
- The fuse is 250V, 3.15A.

2. SAFETY INSTRUCTIONS



- Do not install or use a damaged appliance or accessories. Do not change the specification of this appliance.
- Always use a correctly installed shockproof socket.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Place the appliance on a horizontal surface to avoid water leakage.
- This appliance is intended to be used in a well-ventilated area where the room size corresponds to the room area as specified for the operation.
- Make sure the inlet and outlet ventilation of the appliance is not blocked.
- Keep the minimum distance of 20cm around the dehumidifier from walls, other appliances and units (at least 40cm of air space on air outlet).
- When using the drain pipe, install it so it slopes down towards the floor, to ensure that condensed water is drained continuously by force of gravity.
- Remove the water collected in the water tank as required.
- This appliance is intended to be used at ambient temperature ranging from 5°C to 35°C.
- Keep fingers away from the inlet or outlet of the appliance while operating to avoid the risk of injury.
- Do not use the appliance:
 - near to source of fire;
 - in areas where oil is likely to splash;
 - in areas exposed to direct sunlight;
 - in areas where water is likely to splash;
 - near baths, showers or swimming pools;
 - without mesh pre-filter installed;
- The appliance shall not be installed in the laundry room.
- Do not expose the appliance to very high or freezing temperatures.
- Do not immerse the appliance body, cord or plug in water.
- Do not use the appliance in an enclosed area, such as a closet, to avoid the risk of fire.
- Keep the appliance in an upright position during transport and storage to avoid damaging the compressor.
- All service or repairs must be carried out by the Authorised Service Centre.



"The software in this product contains components that are based on free and open source software. Electrolux gratefully acknowledges the contributions of the open software and robotics communities to the development project. To access the source code of these free and open source software components whose license conditions require publishing, and to see their full copyright information and applicable license terms, please visit: <http://electrolux.opensoftwarerepository.com> (folder NIU5)"

3. PRODUCT DESCRIPTION


3.1 General overview

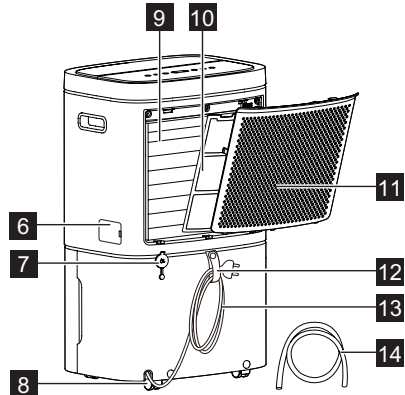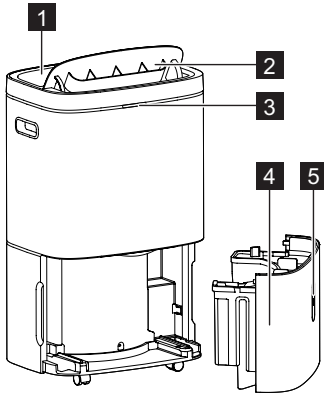


- 1 Control panel
- 2 Louvre / Air outlet
- 3 Air Quality Index (AQI) indicator
- 4 Water tank
- 5 Water level indication
- 6 Air quality sensor
- 7 Drainage plug / Water outlet

- 8 Castors
- 9 High efficiency particle filter
- 10 Mesh pre-filter
- 11 Filter lid / Air intake
- 12 Wire Tag
- 13 Power cord
- 14 Drainage hose



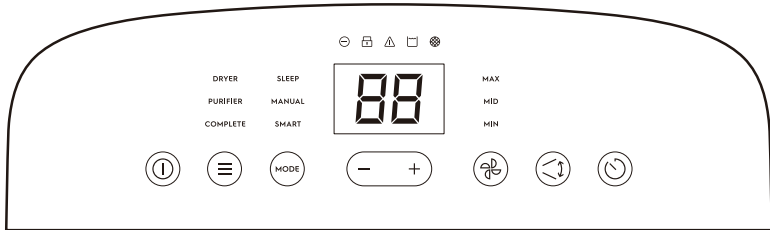



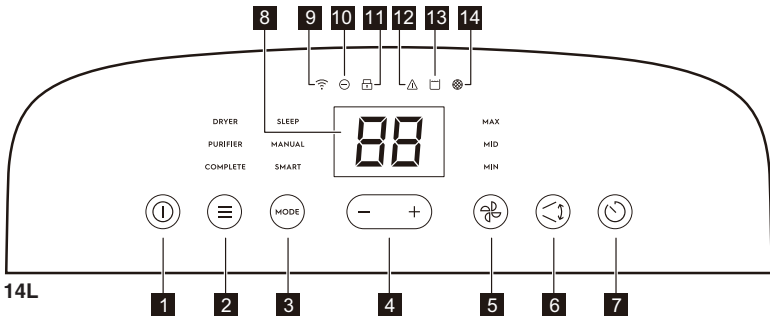





3.2 Control panel layout



12L (Without Connectivity)



14L

Number	Symbol	Buttons	Description
1		ON/OFF button	To power ON and OFF the appliance. To activate the appliance hotspot for Connectivity by long press. Connectivity on select models only.
2		Function button	To switch between the function settings: <ul style="list-style-type: none"> • Dryer • Purifier • Complete
3	MODE	Mode button	To switch between the modes selection: <ul style="list-style-type: none"> • Sleep • Manual • Smart
4	- / +	Minus / Plus button	To adjust the timer and humidity setting.
5		Fan speed button	To set the fan speed in Manual mode. You can switch between 3 speeds: <ul style="list-style-type: none"> • MAX • MID • MIN
6		Swing mode button	To swing the louvre up and down and direct the air flow.
7		Timer button	To set the switch-on and switch-off time.
8		Digital display	To show the humidity level, timer setting and error codes.
Indicators			
9		Wi-Fi (select models)	To show the status of the appliance's connectivity feature, whether it is active or inactive. Connectivity on select models only.
10		Ionizer	To show that the function is active.
11		Child lock	To show that the function is active.
12		Alert	To show that an error occurred.
13		Water tank full	To remind you that the water tank is full and to empty the water tank. To remind you that the water tank has not been installed correctly.
14		Filter change	To remind you to replace the high efficiency particle filter.



See section "5. OPERATING INSTRUCTIONS" for the descriptions in detail.

4. BEFORE FIRST USE

4.1 Selecting a Location

Important

1. Appliance must be upright for one hour prior to operating.
2. Place the appliance in a location with minimum 20cm distance around the unit (at least 40cm of air space on air outlet).
3. A dehumidifier operating in a storage room will have little or no effect in drying enclosed areas such as closets etc, unless there is adequate circulation of air in and out of the area.
4. The appliance must be installed on a level floor that can support it even with a full tank of water.
5. The presence of water in the water tank during first use is normal.

4.2 How It Works

1. The unit is designed to operate between 5°C (41°F) and 35°C (96°F). The unit will not work properly if the temperature is out of this temperature range, or the performance of the unit decreases greatly.
2. The compressor circuit has an automatic 3-minute time delayed start if the unit is turned off and on quickly. This prevents overheating of the compressor and possible circuit breaker tripping.
3. If the appliance is unplugged or the electricity has been cut off when the unit is operating, the unit will set back to previous setting after the power is on again.

4.3 Connectivity / Wi-Fi / App

For selected models only: This feature allows you to connect your appliance to the internet and link it to the App on your smartphone. By this functionality you can receive notifications, control and monitor your appliance from your smart phone. To connect your appliance to the internet via the App, you need a wireless network

at home with internet connection (Wi-Fi) and an Android or iOS smart phone.

NOTE:

Connect your unit to the 2,4 GHz band on your wireless (Wi-Fi) router when onboarding instead of the 5 GHz band. This will give a stronger and longer range signal.


Please follow the steps below to connect your appliance to the internet (onboard the unit):

1. Download the app to your mobile device from Google Play (Android) or App Store (iOS).
2. Open the app and register to create an account.
3. Select your Dehumidifier from the list.
4. Plug the appliance into the power socket.
5. Follow the instructions in the app to complete the onboarding process.

If you are unable to successfully connect your appliance to the internet, consult the troubleshoot guide in section "7. What to do if...".

4.4 Remove the plastic protective bag from the high efficiency particle filter packaging

If your product comes with high efficiency particle filter, please remove the protective plastic packaging covering the filter before first use of appliance.

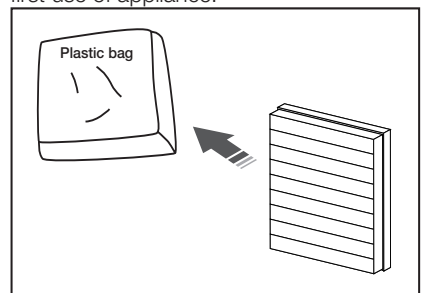


See section "5.12 Filter Change Indicator" for the high efficiency particle filter installation/replacement instructions in detail.

5. OPERATING INSTRUCTIONS


5.1 To Turn On the appliance

To begin operating the dehumidifier, make sure the appliance is plugged in correctly.

Once plugged, the appliance is on standby status. The indicators on the control panel are dimmed except "ⓘ" and "🌙".

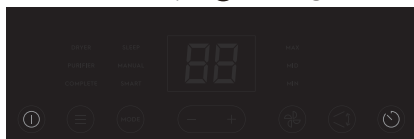


1. Tap (touch and release) "ⓘ" to turn on the appliance. The display shows the current room humidity. The COMPLETE function and SMART mode are activated by default in the first use.

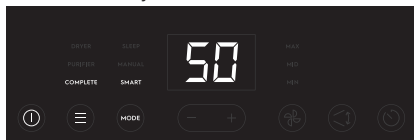

2. In active state, tap "ⓘ" to turn off the appliance. The appliance stops operating and switches to standby.

5.2 Discreet state

If user does not interact with the control panel for over 60 seconds, the control panel will enter inactive state where "ⓘ", "☰", and "MODE" buttons are dimmed to 30% and the other text, icons and display screen will be dimmed to 0% (not visible).

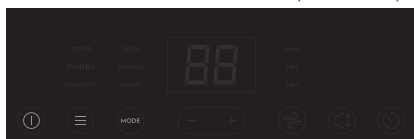

NOTE:


- In inactive state, the appliance will keep operating according to your last setting.
- Tap any button on the control panel to 'wake up' the display, then press again to change setting. Tapping only once, when control panel is in discreet state, will not change any settings or turn off the appliance.

5.3 Basic function selection

Tap "☰" button to choose your desired basic function between COMPLETE function, DRYER function and PURIFIER function.


Complete function

In this function, the appliance purifies and dehumidifies the air at the same time, decreasing the humidity and maintaining comfortable air quality, SMART mode is activated by default in the first use.

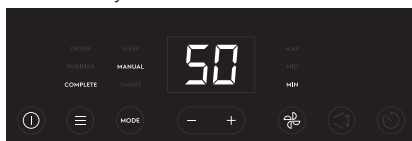

Purifier function

In this function, the appliance purifies the air and maintains air quality at a healthy level.

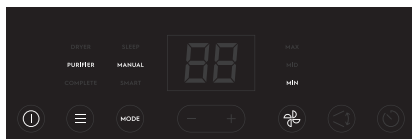

NOTE:

- In the PURIFIER function, the appliance does not dehumidify the air as the compressor is turned off, only the fan is working.
- In the PURIFIER function, the display screen is turned off. Please refer to section "5.11 Air Quality Index (AQI) Indicator" to know more about how to assess air quality level.

Dryer function

In this function, the appliance operates at the highest capacity and fan speed, with louvre swinging to the maximum angle to quickly decrease excess humidity found in the room. You can use this function in a scenario such as line drying of laundry.

**NOTE:**

- In DRYER function, the appliance operates at MAX fan speed by default, you can also adjust the fan speed as you want. User cannot set target humidity setting while in this function.
- The DRYER function operates for up to 8 hours if unattended, after that time the appliance will turn off automatically.
- The appliance will stop operating if the water tank is full before reach 8 hours. Please empty the water tank to restart the operation.


WARNING!

- Do not cover the air outlet of the appliance with clothes. It may cause excessive heat, fire or failure of unit.
- Do not place the wet clothes on the top of the appliance and do not make the water drop into the unit. It may cause electric shock, creepage or failure of unit.

5.4 Mode selection


If you have chosen COMPLETE or PURIFIER function, tap "MODE" button to choose your desired mode between SMART mode, MANUAL mode and SLEEP mode.

NOTE:

- The MODE button is disabled when DRYER function is selected.

Smart mode

1. When choosing COMPLETE function + SMART mode - the appliance aims to main both the humidity and air quality at a comfortable and healthy level. The appliance will automatically adjust fan speed based on a combination of both these factors.

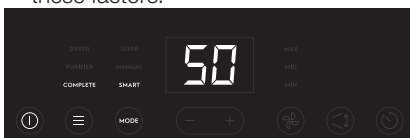


2. When choosing PURIFIER function + SMART mode - the appliance aims to maintain the best indoor air quality (it does not dehumidify). The appliance will automatically adjust fan speed based on input from the PM sensor. Display screen on control panel is turned off.

**NOTE:**


- In SMART mode, you cannot adjust the humidity setting and the fan speed.

Manual mode

1. When choosing COMPLETE function, in MANUAL mode, tap "-" and "+" button to set target humidity in 5% increments between 35%-85% and tap "fan speed" button to change the fan speed to MIN, MID, MAX.

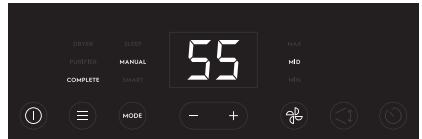
**NOTE:**

- Once desired target humidity is selected, the display screen will shift back to showing 'current' real-time room humidity level.
2. When choosing PURIFIER function + MANUAL mode, you can tap "fan speed" button to change the fan speed to MIN, MID, MAX.

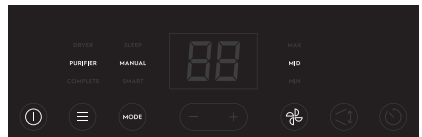


Sleep Mode

1. SLEEP mode is designed to be non-disturbing. When selected, it will aim to provide a low noise environment (as available) with lowest fan speed setting, dim display and turn off the Air Quality Indicator light.

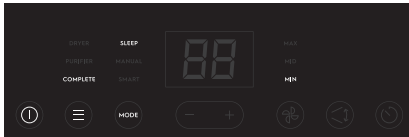

2. PURIFIER function + SLEEP mode will have lower noise than COMPLETE + SLEEP, as the dehumidification function is turned off.

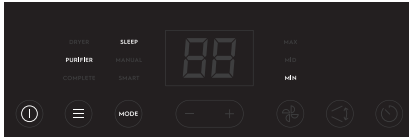


NOTE:

- In SLEEP mode, cannot set the target humidity and the fan speed.
- In SLEEP mode, after 10 seconds without any interaction with the control panel, the "1", "≡" and "MODE" buttons are dimmed to 30% and the other text, icons will be turned off completely to be non-disturbing.
- After 8 hours operates in SLEEP mode, unit will quit SLEEP mode automatically and operates in SMART mode.

5.5 To Run in Continuous Operation

1. Choose COMPLETE function + MANUAL mode, then tap the "-" button to reduce target humidity setting

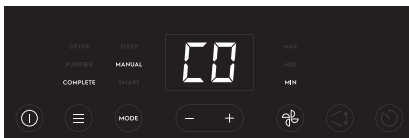

below 35% till the display shows "CO" and the appliance enters Continuous operation.

2. To exit Continuous Operation (CO) function, tap the "≡" or "MODE" button. You can also adjust the target humidity setting above 35% to exit this function.


NOTE:

- It is recommended to connect the drainage hose to dehumidifier when using in Continuous operation, to prevent the operation from stopping when the water tank is full frequently.

5.6 Swing

The air outlet in the appliance has an in-built louvre. You can turn on this feature, for the louvre to automatically move up & down continuously so as to better direct the air flow.

1. Tap "$\swarrow\searrow$" button to enable the auto swing feature, the louvre will swing up and down automatically.

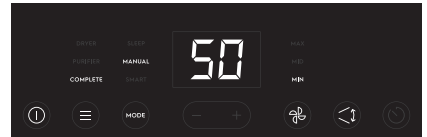

2. Tap the button again to stop the louvre at your desired angle/direction.


NOTE:

- Please do not adjust the position of louvre manually.
- Please ensure louvre is NOT stopped at completely closed position when deactivating SWING feature and appliance still operating, as this cause overheating.

5.7 Timer


The TIMER feature allows you to have either Delayed Start OR Delayed Stop for the appliance, in increments of 0.5 to 1 hours (up-to the max of 12 hours).

1. When the appliance is on, tap "⌚" button and display should change to "0.0" to reflect Delayed Stop is initiated. Tap or hold "-" and "+" button to change the time by 0.5 hour increments, up to 6 hours, then at 1 hour increments up to 12 hours. The appliance will count down the time remaining, until appliance switches OFF by itself.

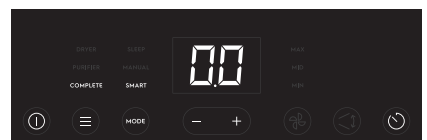

2. When the appliance is off, tap "⌚" button and display should change to "0.0" to reflect Delayed Start is initiated. Tap or hold "-" and "+" button to change the timer setting as mentioned above. The appliance will count down

the time remaining, until appliance switches ON by itself.

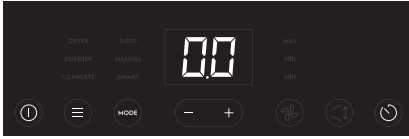


- The selected time will be set as target (registered) when user does not interact with control panel for 5 seconds after choosing desired time. Once time is set, display screen will revert back to show room humidity levels, tap "⏸" button once, display screen will show the remain time.
- To exit & cancel the timer feature, long press "⏸" button for 3 seconds OR turn the unit ON/OFF by pressing the power button anytime OR adjust the timer setting to "0.0" hours.

NOTE:

- Before entering TIMER setting, make sure power is being supplied to the appliance.
- Before entering Delayed Start, make sure you have chosen your desired setting, for example, if you want the appliance turn on and operate with COMPLETE function + MANUAL mode + 50% humidity + MAX fan speed after 5 hours automatically, tap "☰", "MODE", "—" or "+" and "⌚" sequentially to set your desired setting and turn off the appliance, then follow step 2 to initiate the Delayed Start time to 5 hours.


5.8 Ionizer Indicator

Long press "☰" and "MODE" buttons simultaneously for 5 seconds to activate/inactivate the ionizer feature. When the ionizer feature is activated, the "⊖" indicator will show on the control panel and the ionizer is energized to help to clean the air. This function is recommended when the indoor air quality is in bad condition.

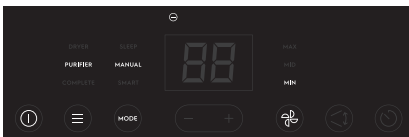


5.9 Child Lock Indicator

Long press "⓪" and "MODE" buttons simultaneously for 5 seconds to activate/inactivate the Child Lock feature. When the Child Lock feature is activated, the "🔒" indicator will show on the control panel and the control panel is locked.

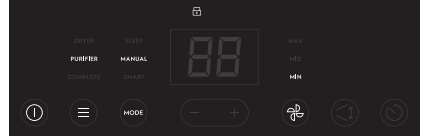

5.10 Water Tank Full Indicator

When the water tank is full, the indicator "☐" lights up and the unit will make a double short beeps and repeat the sounds after first double beeps to remind you to empty the water tank. The compressor will stop immediately and the fan will still keep running. See section "5.15 Use the Water Tank" to know how to handle and empty the water tank.

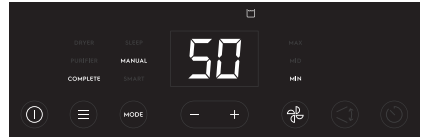

NOTE:

- In SLEEP mode, no beep sound reminder when the Water Tank is full.
- You can also mute the beep sound by short pressing "—" and "+" buttons simultaneously.


5.11 Air Quality Index (AQI) Indicator

The appliance has an air quality sensor that analyses the air quality index. The AQI (air quality index) light will show the real-time air quality through different colours of light as shown below:

AQI INDICATOR COLOR	PM 2.5 (µg/m³)	AIR QUALITY LEVEL
Blue	0-15	Very Good
Green	16-35	Good
Orange	36-75	Bad
Red	>75	Very Bad

5.12 Filter Change Indicator

The filter change icon "⊗" will light up to remind you to replace the high efficiency particle filter (Ref.# EFCAREU7). Refer to the Electrolux Life App or the Electrolux website on where to purchase replacement filters. Always ensure the plastic protective packaging is removed from the filter before its use in the unit.

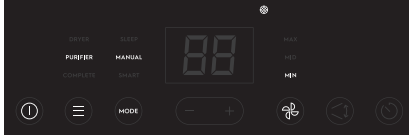


NOTE:


The high efficiency particle filter cannot be washed, it can only be replaced.

Follow below steps on how to replace your high efficiency particle filter:


1. Open the filter lid with the finger pull from the top.

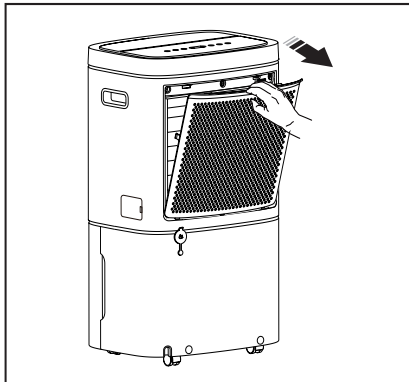

2. Take out the high efficiency particle filter.

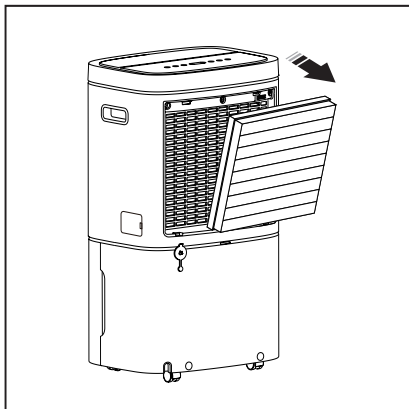


3. Replace the new filter into the unit (blue side outwards) and close the filter lid.

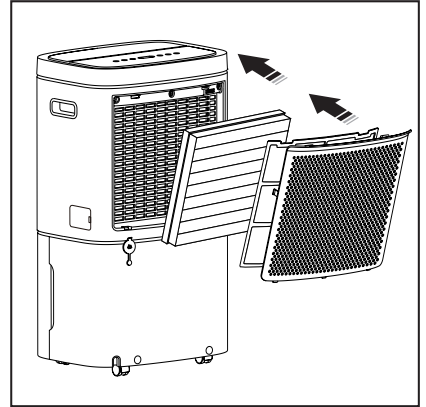

4. Reset the filter change indicator, press and hold the "1" and "≡" buttons for 5 seconds to reset the indicator.

5.13 Connectivity (Wi-Fi) Feature

For selected models only: The appliance is equipped with a Wi-Fi chip that enables it to be connected to the internet and via the App enables you to control and access its full functionality remotely. Download our Electrolux Life App and follow the instructions for how to connect your appliance to the internet. When the connection is established, the "📶" indicator will light up.

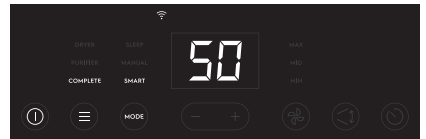

- To reset the appliance Wi-Fi connection, press and hold the "1" button for 5 seconds until the "📶" indicator and air quality light start blinking. Then press and hold the "1" button for another 5 seconds until the "📶" indicator and air quality light stop blinking and "📶" indicator disappears, the Wi-Fi connection has now been reset.
- Please refer to the 'Quick Start Guide' or the instructions in the App for details on how to connect your appliance to the internet.

5.14 Alerts & Errors

When a problem occurs in the appliance, the "△" indicator will show on the control panel and the display will show the corresponding error code at the same time.



- E3-** PM2.5 sensor failure
- E4-** DC Motor failure
- E5-** Humidity sensor failure
- E6-** Communication Failure
- E7-** Indoor defrost thermistor failure.
- E8-** Refrigerant Leakage

NOTE:

- For error code E3, appliance will continue to run (some features may be disabled), but for the other error codes, it will stop operation completely.
- When error code occurred, unplug the unit and plug it back in. If error repeats, please contact Authorised Service Centre.

5.15 Removing collected water


There are two ways to remove collected water.

Use the Water Tank


When the water tank is full, the Water Tank Full indicator "☑" will flash and the unit will make a double short beeps and repeat the sounds after first double beeps to remind you to empty the water tank.

Following the steps below to remove the collected water from the water tank:



1. Grip the water tank edges of the grooves on both sides securely, then pull out the water tank a little.

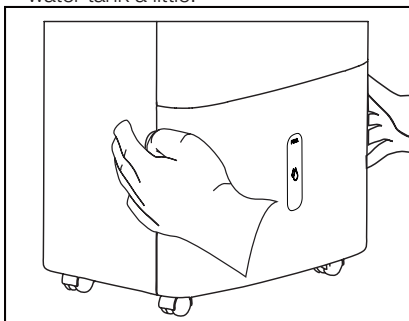

2. Hold both sides of the water tank with even strength, and pull it out from the unit.

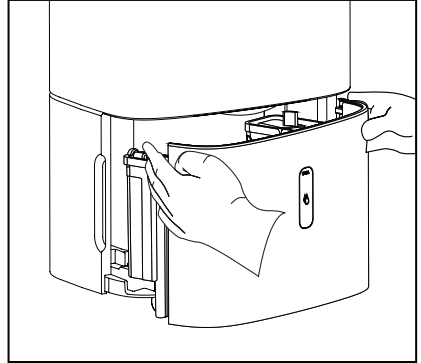

3. Grip the water tank handle and open the water tank sealing cap in the side corner, then empty the water tank.

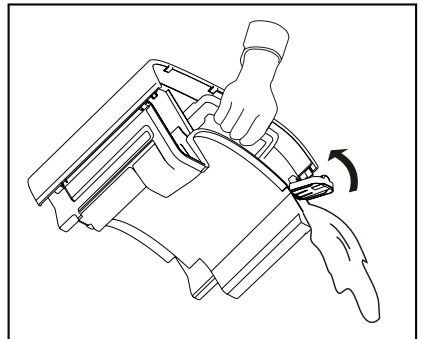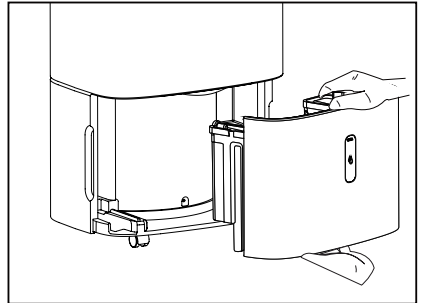

4. Close the sealing cap and put back the water tank in place.

The water tank full indicator will turn off, and the unit will start up again when the water tank is restored in its correct position.


NOTE:

- When you remove the water tank, do not touch any parts inside the unit, otherwise the product may be damaged.
- Be sure to push the water tank gently all the way into the unit. Banging the water tank against anything or failing to push it in place may cause the unit not to operate.
- Because the castors cannot be locked, you need to apply a limited force so that appliance does not move suddenly.
- Discard water from water tank. The water in the water tank is not potable.


Continuous Drainage

Once the continuous drainage is enabled, water can be automatically emptied from the appliance and the water will not flow into the water tank unless there is something wrong with the continuous drainage. You will need a drainage hose and a drain nearby to discharge the water into before conducting this operation. Following the steps below to make sure the hose to be connected correctly:


1. Pull down the drainage plug at the back of the unit.

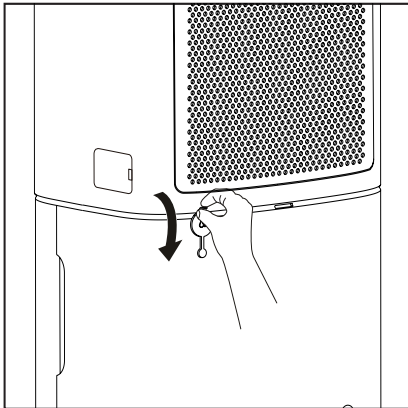

2. Push the drainage hose firmly into the drainage outlet to make sure the hose to be connected to the unit properly so there will be no leaks.

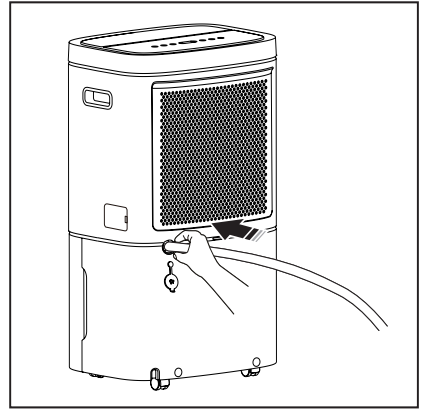

3. Direct the hose toward the drain and place the other end of the hose into the drain, making sure that there are no kinks that will stop the water from flowing smoothly.

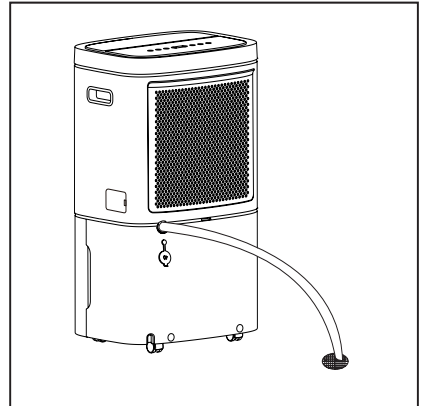


4. Select the desired humidity setting and fan speed on the unit for continuous draining to start.

NOTE:

- Make sure the water tank has been installed properly before trying to connect the drainage hose to the drainage outlet.
- Shake or pull the hose slightly to make sure the hose is connected properly. If there is a leak, pull out the hose and repeat the above-mentioned hose connection process.
- It is recommended that a Dehumidifier Drain Hose - (12 mm) be used. Make sure there are no kinks or elevations in the hose.


6. CARE, CLEANING AND STORAGE

6.1 To Clean the appliance

WARNING!
 Before cleaning the unit, make sure to disconnect the unit from power supply.

1. Clean the Filter lid and Case

- The plastic surface of the appliance may be cleaned with an oil-free dry cloth or a vacuum cleaner equipped with a soft brush.

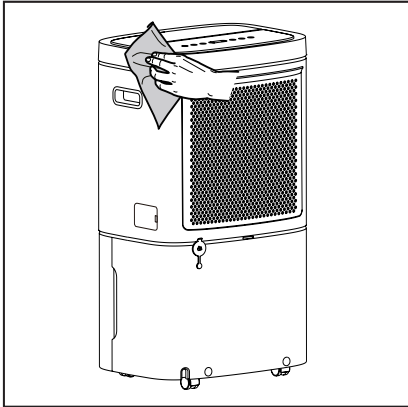


- Use the slightly damp cloth. Do not use bleach or abrasives.
- Do not splash water directly onto the unit. Doing so may cause electric shock, insulation failure, or rusting.
- The air intake grille and outlet get soiled easily, so cleaning such parts with a vacuum cleaner is recommended.


2. Clean the Water Tank

Every 4-6 weeks, clean the water tank to prevent growth of mold, mildew and bacteria.

- a. Pull out the water tank from the unit.
- b. Take off the handle following the steps as shown in below image.

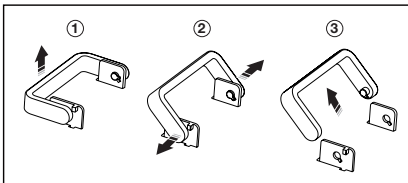

- c. Open the cover lid of the water tank.

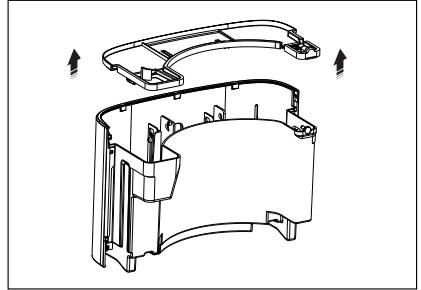


- d. Partially fill the water tank with clean water and add a little mild detergent. Swish it around, then empty and rinse the water tank.
- e. Reinstall the cover lid, handle and put the water tank back into the unit.

NOTE:

- Do not use a dishwasher to clean the water tank. After cleaning, the water tank must be put back in place so the appliance will operate properly.

3. Clean the Air Quality Sensor

Dust accumulated in the air quality sensor may result in incorrect sensor readings and affect performance. Use a vacuum cleaner with a soft brush to remove dust that might accumulate in this area. Vacuum at least once every 4 weeks or as per instructions in the Electrolux Life App.

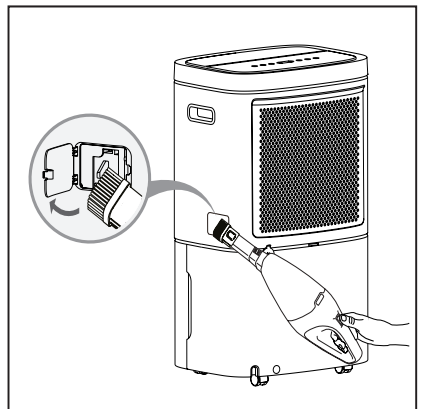


4. Clean the Mesh Pre-filter


The mesh pre-filter is put together with the filter lid at the back of the appliance, it should be checked and cleaned at least every 30 days or more often if necessary.

NOTE: DO NOT PUT THE FILTER IN A DISHWASHER.

- a. Open the filter lid and you will find the mesh pre-filter is put behind the back of the lid.

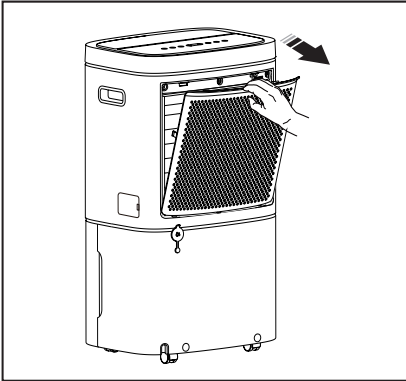

- b. Take out the mesh pre-filter from the assembly.

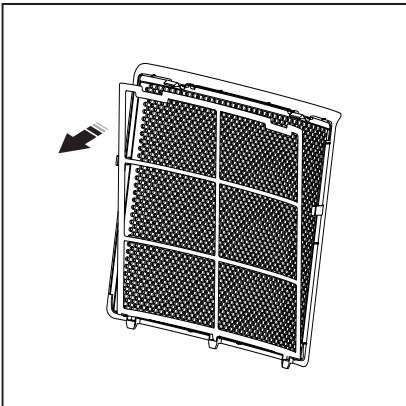

- c. Clean the mesh pre-filter with warm, soapy water. Rinse and dry it by airing before putting it back.
- d. Reinstall the filter, then put the filter lid back.



CAUTION!

DO NOT operate the appliance without a filter because dirt and lint will clog inside the appliance, which will affect the performance..

6.2 Replace the high efficiency particle filter

See section "5.12 Filter Change Indicator" for the details when and how to replace the high efficiency particle filter.

NOTE:


- Be different from the mesh pre-filter, the high efficiency particle filter can not be washed, it can only be replaced.

Please visit electrolux.com to order your replacement filter.

6.3 Storage

If you are not going to use the appliance for a long time, please store it properly.

- 1. Unplug the appliance, then tidy up the power cord using the tag at the back of the unit.

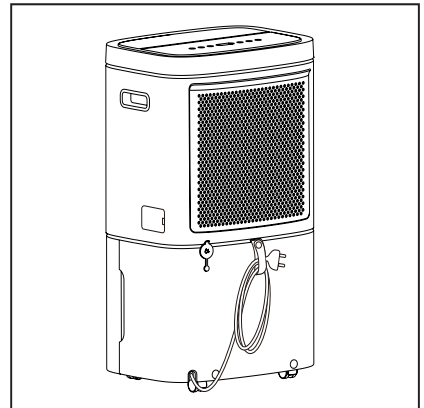

- 2. Empty the water tank and clean the mesh pre-filter.
- 3. Dry the appliance and all accessories by airing.
- 4. Pack it with plastic bag or return it to its carton then place the unit in a cool and dry place.

7. WHAT TO DO IF...


Before calling for service, review this list. It may save you time and expense. This list includes common occurrences that are not the result of defective workmanship or materials in this appliance.


Occurrence	Possible Cause	Solution
Dehumidifier does not operate	Wall plug disconnected.	Push plug firmly into wall outlet.
	House fuse blown or circuit breaker tripped.	Replace fuse with time delay type or reset circuit breaker.
	The dryness level you selected has been reached.	Dehumidifier automatically shuts off when selected amount of moisture has been removed from the air. If you want to remove more moisture, enter in Continuous operation. After the dehumidifier starts, reset the control panel to the desired setting.
	Water Tank not installed properly.	See "5.15 Removing Collected Water" .
	Water in the water tank has reached its preset level.	Dehumidifier automatically turns off when this occurs. Empty water tank and return it to position.
	Dehumidifier is not turned on.	Turn unit on.
The programme / cycle lasts too long.	Windows or doors near dehumidifier are open to outdoors.	Close all windows or doors to outside.
	Area to be dehumidified is too large.	Check with your dealer to see if capacity is adequate.
	Air movement through dehumidifier is blocked. Grill may be dirty.	Use brush attachment of vacuum cleaner to clean grill. See "6. Care, Cleaning and Storage" . Dehumidifier must be placed in a space that does not restrict air flowing into the air intake or outlet.
	Dehumidifier has been installed or restarted recently.	The higher the moisture in the room, the longer the dehumidifier will operate.
	Dehumidifier is in the Continuous operation and will remain on in this mode.	Exit this operation.

Occurrence	Possible Cause	Solution
Dehumidifier is operating, but room is not dry enough.	Humidity setting is too high.	Select Complete function, and adjust in manual mode to a lower setting or choose Continuous operation for maximum dryness.
	Dehumidifier has been installed or restarted recently.	The higher the moisture in the room air, the longer it takes for the room air to become dry.
	Dehumidifier does not have sufficient clearance to operate.	Air flow to air intake is blocked. See "4.1 Selecting a Location".
	Room temperature is too low.	Unit will not operate satisfactorily if the room temperature is below 5°C (41°F). See "4.2 How it Works".
	Refer to causes under "The programme / cycle lasts too long".	
Frost appears on coils above water tank.	Dehumidifier has been turned on recently.	This is normal due to refrigerant rushing through the coil. Frost will usually disappear within 60 minutes.
Abnormal noise.	Room Temperature is too low.	Please operate dehumidifier when room temperature is above 5°C (41°F).
	The floor is not flat.	Please install the dehumidifier on level floor.
	User didn't remove high efficiency particle filter's plastic bag.	Please remove high efficiency particle filter's plastic bag.
"dF" code shows on the display, the compressor stop running and the dehumidifier works at MAX fan speed.	Room Temperature is low, the dehumidifier enters in Defrost function automatically.	This is normal, the dehumidifier will automatically quit Defrost function after some minutes and continue working with current operating setting.

Occurrence	Possible Cause	Solution
The appliance is not connected to the internet / the Wi-Fi indicator is constantly blinking. (Selected models only)	The wireless (Wi-Fi) router is not working.	Check that the router is ON and if other connected devices are working. If the router was OFF, turn it ON and wait for a few minutes and check again.
	The router needs a restart.	Try to restart the router by unplugging and plugging the router. Wait a few minutes and check again.
	Your dehumidifier is out of range from the router.	Try moving the unit closer to the router. Make sure your unit is within 10 meters range from your router and with not too many walls in between.
		Connect your unit to the 2,4 GHz band on your wireless (Wi-Fi) router when onboarding instead of the 5 GHz band. This will give a stronger and longer range signal.

8. ENVIRONMENT CONCERNS

Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances.

Do not dispose appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

www.electrolux.com/shop



CE

